




Unsolder red, black, white. Cut green and blue at add-on map module. Remove module. Then  
Remove cover over spkr and power input. Cut purple wire at cap. Unsolder grey wire at radio connection point. Then.....

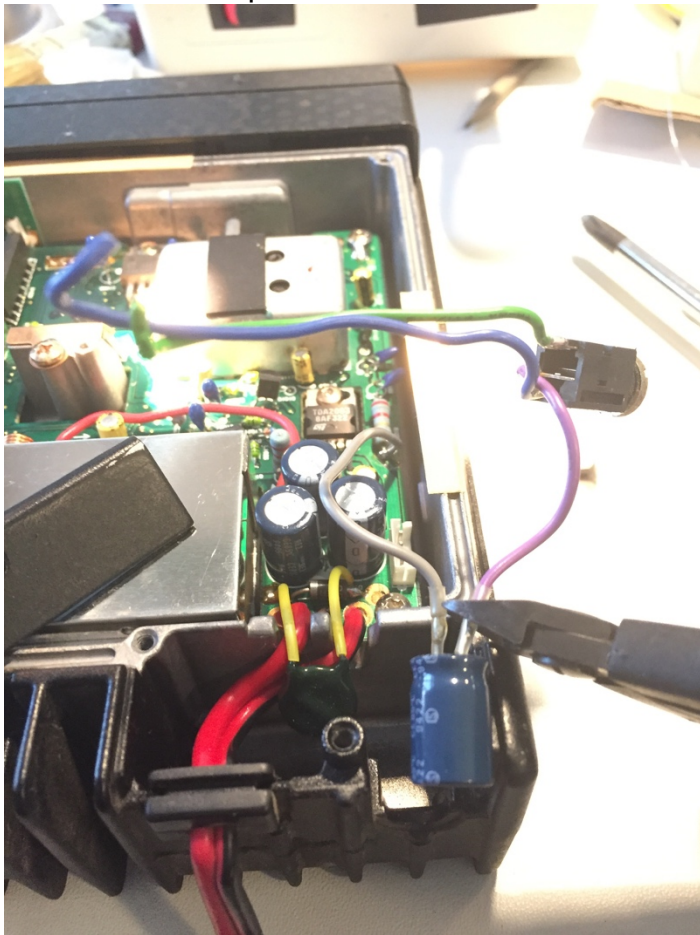

I put on a socket strip like this.



Oh yeah, one more thing. You will find this resistor cut out of the circuit.

